



Model BCL 180W / 180ZW Parts List

A = Standard Equipment

O= Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
001	188695-0	HOUSING SET	1	PC.
	C10 424209-4	SPONGE SHEET 50-50	2	PC.
	C20 810526-2	CAUTION LABEL	1	PC.
	D10	INC. 12		
002	651944-3	SWITCH DMC-1115-13	1	PC.
003	231473-8	COMPRESSION SPRING 4	1	PC.
004	451227-9	SWITCH LEVER	1	PC.
005	631887-5	CONTROLLER	1	PC.
006	643833-6	TERMINAL	1	PC.
008	424248-4	SPONGE SHEET 15-25	1	PC.
009	125588-0	MOTOR ASS'Y	1	PC.
	C10 451373-8	BASE	1	PC.
	C20 265199-0	+ PAN HEAD SCREW M3X8	2	PC.
	C30 240102-2	FAN 82	1	PC.
010	416030-5	FAN COVER	1	PC.
011	421554-8	RUBBER RING	1	PC.
012	188695-0	HOUSING SET	1	PC.
	C10 424209-4	SPONGE SHEET 50-50	2	PC.
	C20 810526-2	CAUTION LABEL	1	PC.
	D10	INC. 1		
013	266429-2	TAPPING SCREW 3X16	7	PC.
014	866660-6	BCL180 NAME PLATE	1	PC.
015	410237-5	STAY	1	PC.
016	443060-3	FILTER	1	PC.
017	451208-3	PRE-FILTER	1	PC.
018	265995-6	TAPPING SCREW 4X18	1	PC.
019	941051-3	FLAT WASHER 4	1	PC.
020	424208-6	VALVE	1	PC.
021	451226-1	CAPSULE	1	PC.
A01	122858-8	NOZZLE ASS'Y	1	PC.
	C10 424095-3	ROLLER	4	PC.
	C20 268208-4	PIN 3	4	PC.
	C30 424096-1	WIPER	1	PC.
A02	451240-7	SASH NOZZLE	1	PC.
A03	451241-5	PIPE	1	PC.
A04	451242-3	SASH NOZZLE HOLDER	1	PC.
	BL1815	BATTERY LXT 18V 1.5AH	1	(BCL180W)
	DC18RA	CHARGER	1	(BCL180W)
D01	654069-2	RECEPTACLE	4	PC.
D02	654208-4	RECEPTACLE	2	PC.